## SERVICE PARTS

It is the policy of Coster Engineering to constantly improve its products whenever it is practical to do so.

Coster Engineering must therefore reserve the right to redesign or change its equipment or component parts thereof without incurring the obligation to install or furnish such changes on equipment previously delivered.

## **INSTRUCTIONS FOR ORDERING PARTS**

- 1. The reference numbers in the illustrations correspond to the numbers shown in the "Reference Number" column in the parts listing. The quantity in the "number required" column is the number of parts used in the accompanying illustration. The term "A/R" for number required indicates "as required" where the quantity may vary. Order all parts by their part number and description.
- 2. Always mention the identification number of the code and serial numbers found on the name plate of the unit on which the part is to be used. Much delay and confusion can be avoided when correct numbers are specified on parts order and correspondence.
- 3. Owner, order all parts through your local dealer.
- 4. Dealers must indicate how to ship; whether by truck, rail freight, express, or parcel post.
- 5. Collect phone calls are not accepted.
- 6. Address all orders for parts as follows:

COSTER ENGINEERING 217 E PLUM STREET MANKATO, MN 56001 PH (844) 975-1100 FAX (507) 549-1101 costerwater.com

## INSTRUCTIONS FOR RETURNING PARTS FOR ADJUSTMENT

- To assure prompt handling of claims, your dealers should follow standard claim and forward claim procedures within thirty (30) days, of any part failure or malfunction believed to be a warranty claim.
- 2. No returned part will be accepted unless they are transportation prepaid and accompanied by the packing list, copy of the returned goods authorization form, or the packing list copy of the warranty claim form.
- 3. Parts returned should have a tag attached with sender's name and address clearly printed.


## DISCLAIMER


This supplement contains additional information that is specific to units. It is used in conjunction with the basic machine operator's manual which includes safety and operational information.


Retain all manuals for future reference. Read all and understand all manuals in their entirety before operation or service.

The information contained in this manual is subject to change without notice.


Coster Engineering shall not be liable for technical or editorial omissions made herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

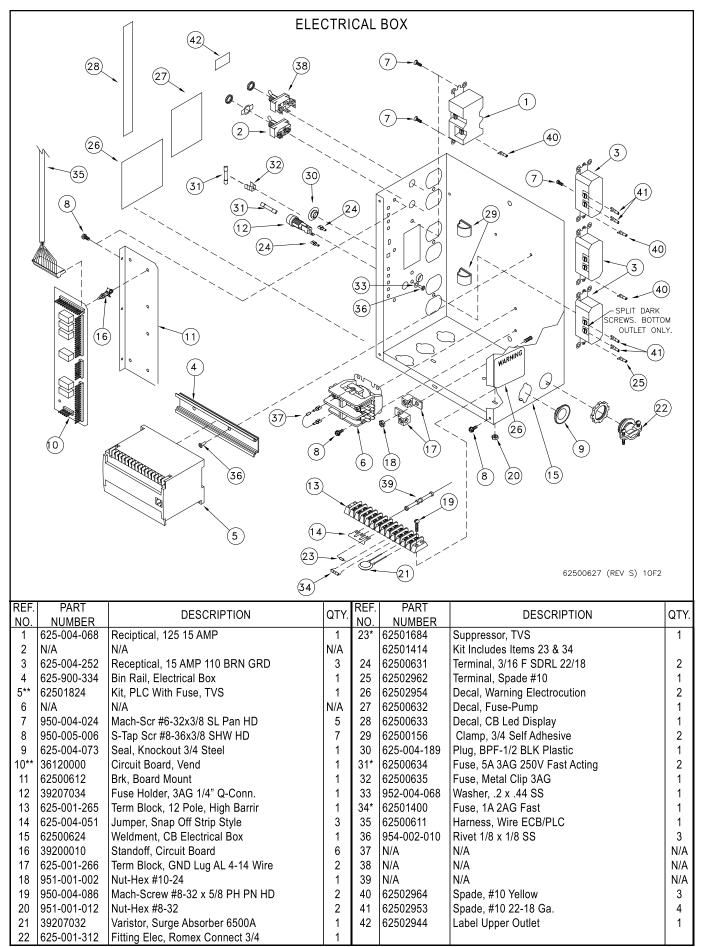


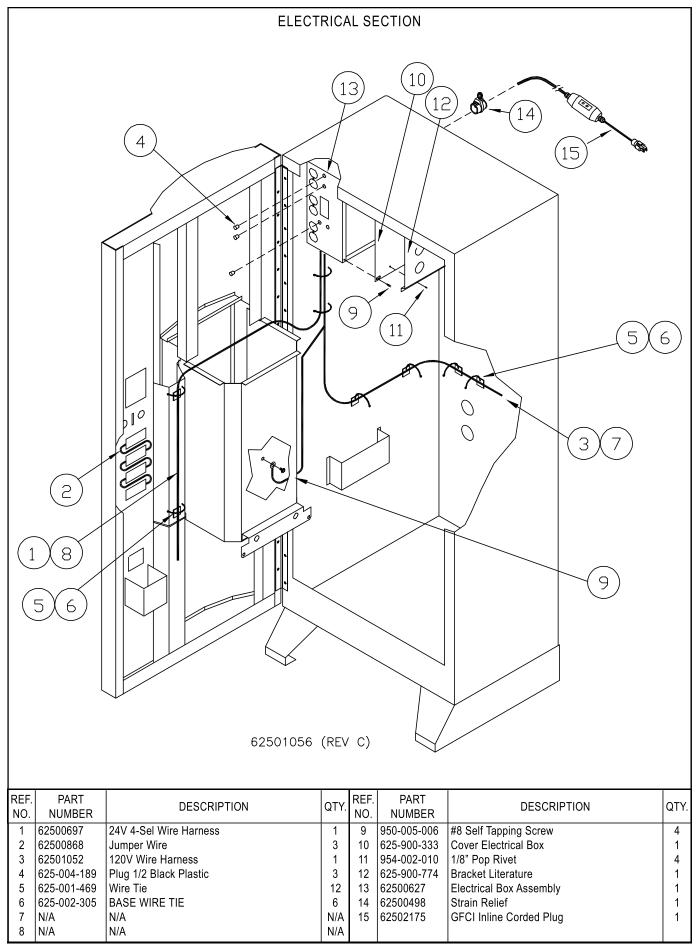


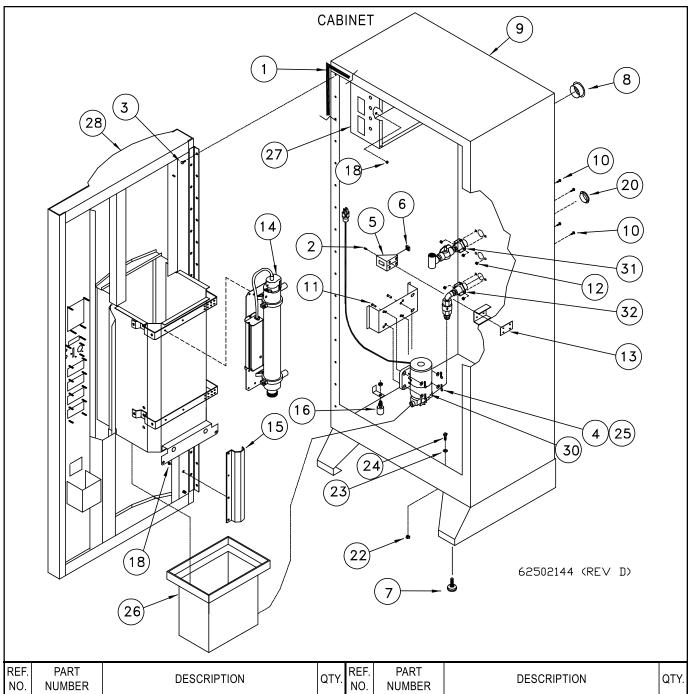



NO.	NUMBER	DESCRIPTION	QTY.	NO.	NUMBER	DESCRIPTION	QTY.
1	921-001-041	Weather Strip 5/8 x 3/8	16	17	N/A	N/A	N/A
2	060905	Self Tapping Screw #10-24 x 1/2 SHW Head	4	18	951-002-001	Flanged Whiz Lock Nut 1/4-20	4
3	954-002-007	Rivot-Pop, 1/4 x 1/4 SS OEDH	16	19	N/A	N/A	N/A
4	953-005-004	Cotter Pin	4	20	625-004-325	Plug, 1 1/8 Plastic	1
5	625-001-070	Vend Part, Bracket	1	21	N/A	N/A	N/A
6	625-001-075	Vending Part, Nut 1/2-13	1	22	061910	Nut 3/8-16 SS	2
7	625-001-950	Leg, 3/8-16 Rubber Leveler	4	23	625-001-509	O-Ring	2
8	625-001-965	Vent, 2" Dia Aluminum Louvered	4	24	031-09103	Hex Head Cap Screw 3/8 x 3/4 SS	2
9	62501310	Cabinet, Weldment Full Size	1	25	952-004-068	#10 Washer SS	4
9	62500824	Cabinet, Weldment In Isle	1	26	62500595	CB Drain Bucket	1
10	950-003-071	Carriage Bolt #10 x 1/2 SS	6	27	62500627	Electrical Box Assembly	1
11	953-002-050	Clevis Pin, 3/16 x 1	4	28	62502101	Door Weldment	1
12	951-002-012	Hex Nut #10-24 Whiz Lock	6	29	N/A	N/A	N/A
13	625-901-099	Plate, Door Latch	1	30	625-900-510	Assembly, Drain Pump	1
14	62500859	U.V. Assembly	1	31	N/A	N/A	N/A
15	62501092	Bracket, Door Stop	1	32	62501965	Assembly, Drain Line	1
16*	625-001-325	Level Switch, N/C Float & Stem	1				

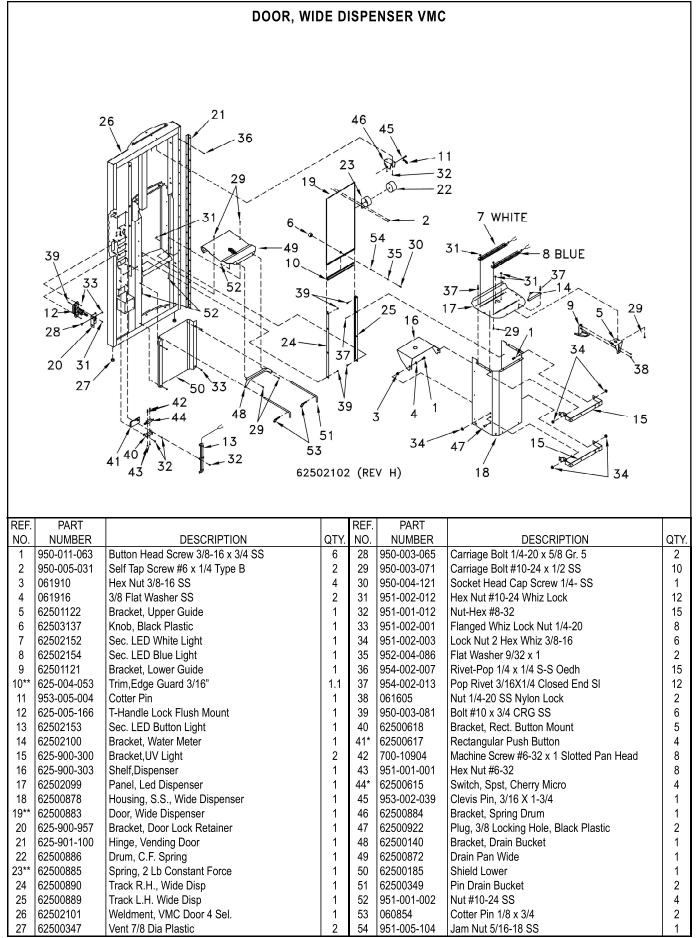


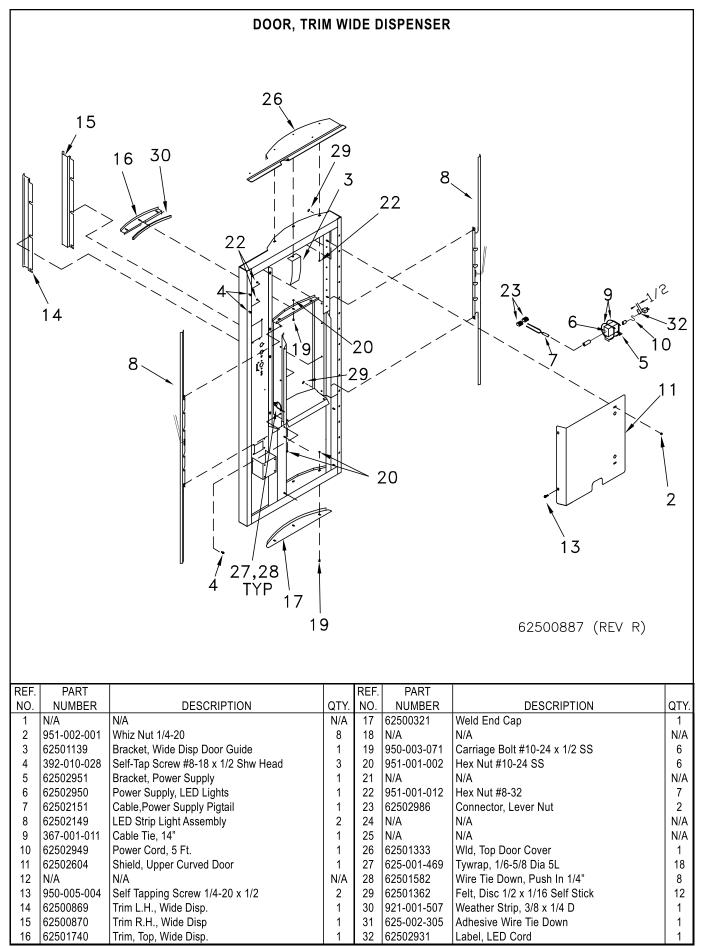

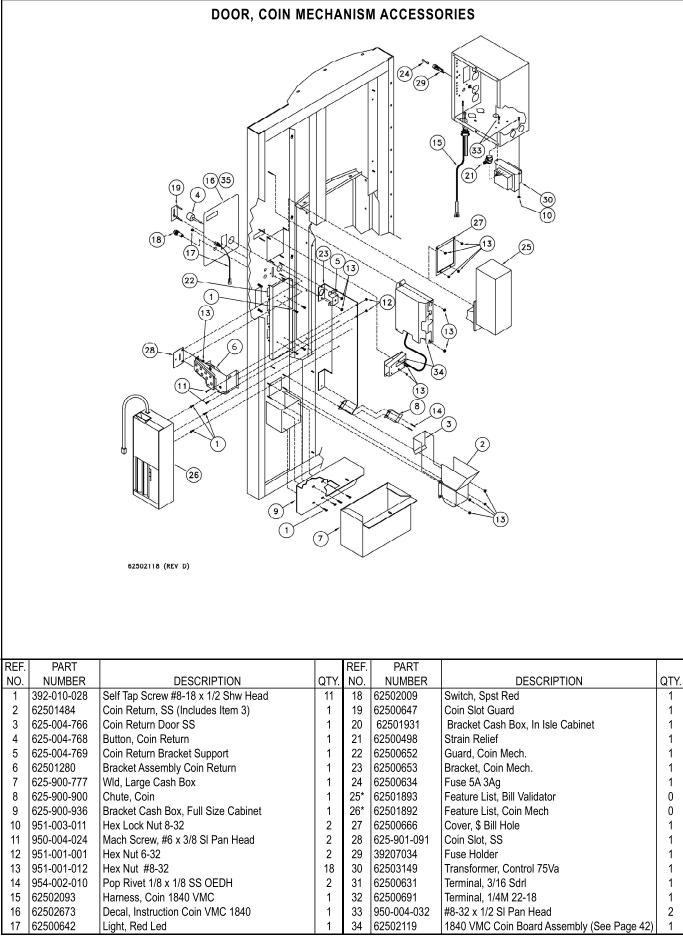


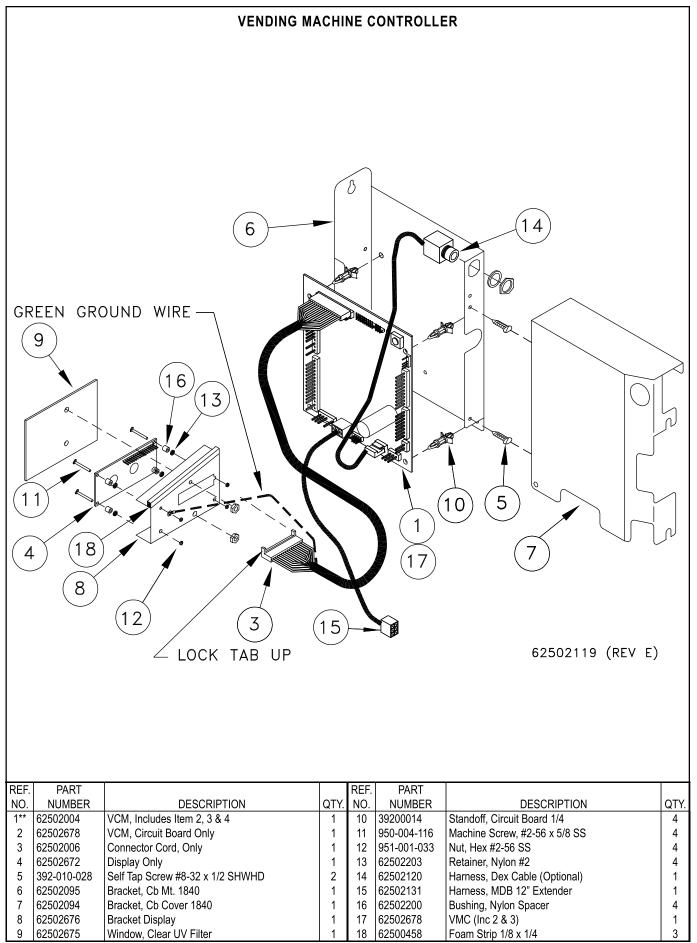

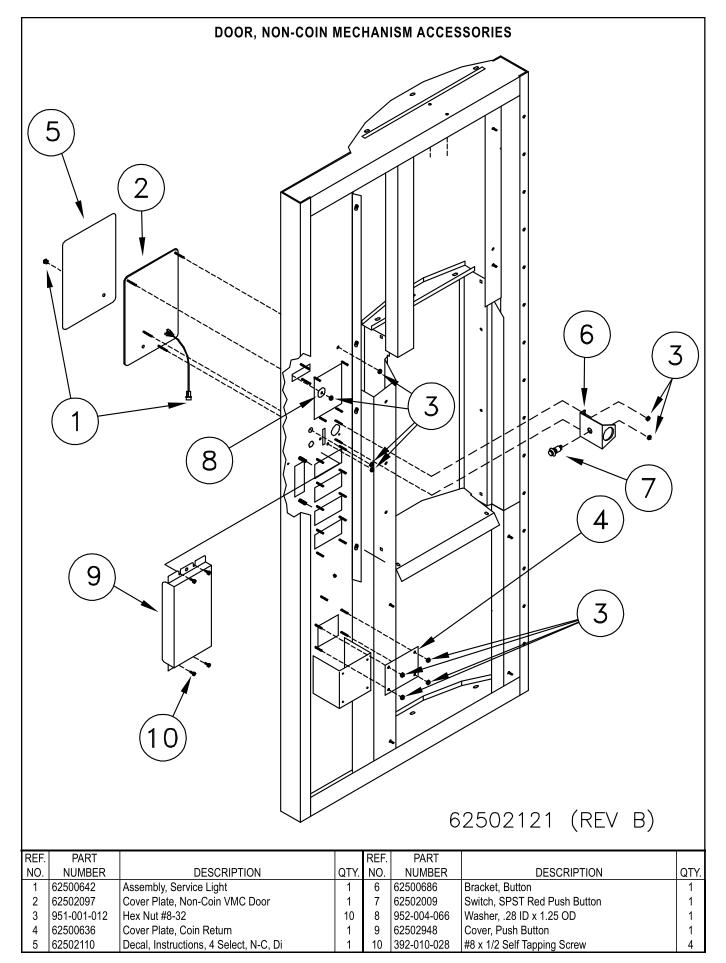


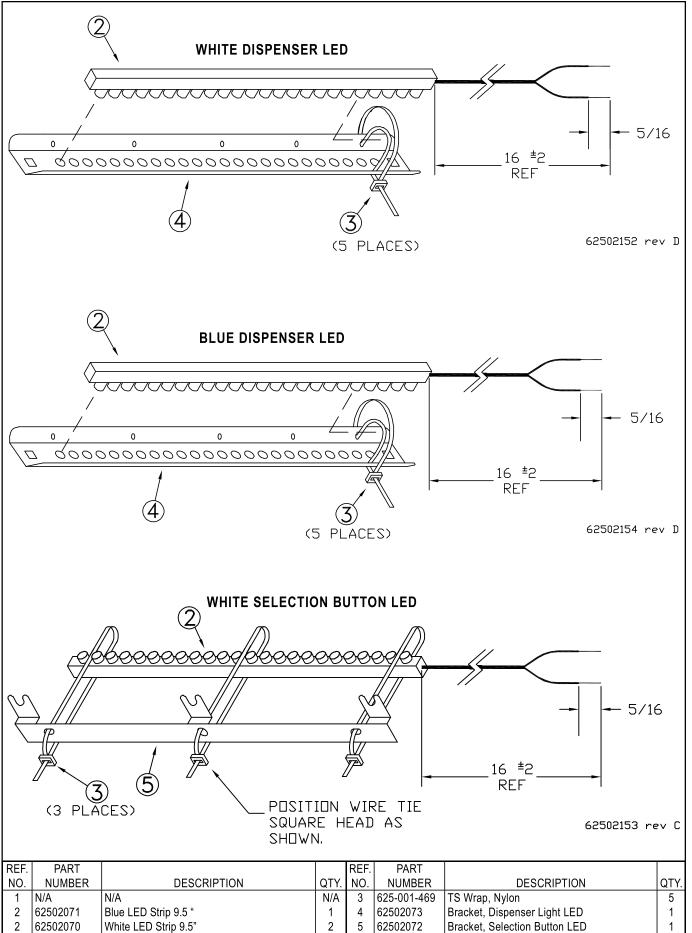


ction Button

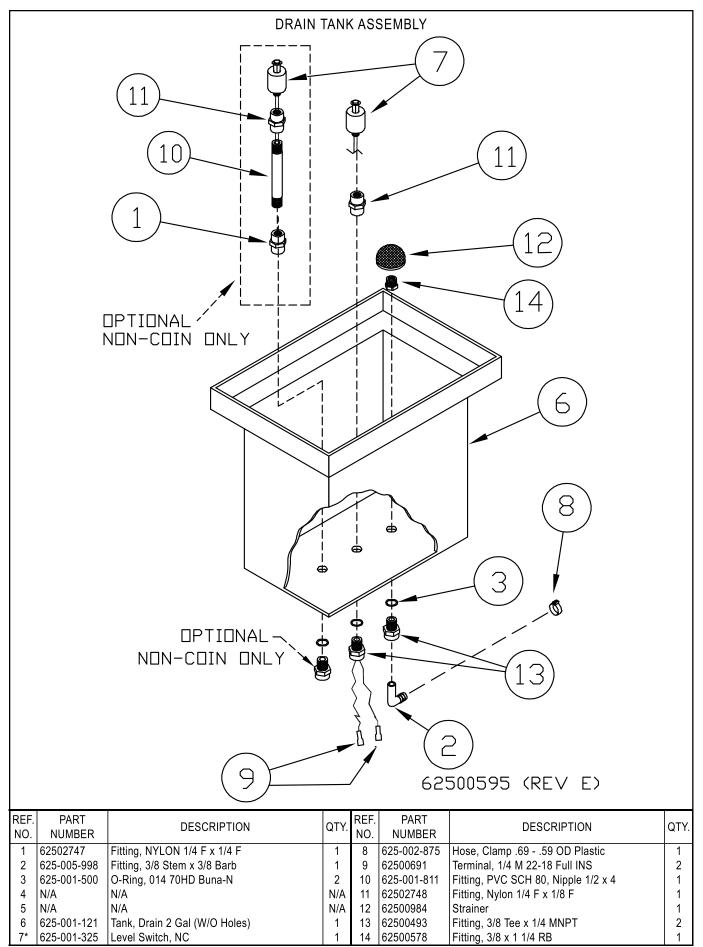


REF.		5		REF.			0.7/	
NO. 1	NUMBER 62502608	DESCRIPTION Ftg, 1/2 Bulkhead 1/2 x 1/2	QTY.	NO. 4	NUMBER 62501963	DESCRIPTION Valve, Check 3/8 FNPT Poly	QTY. 1	
2 3	62501020 62501964	Ftg, Nylon Nipple 3/8 x 1/2 Ftg, Nylon 3/8 Street Elbow	1	5	625-005-949	Ftg, 3/8T x 3/8 MNPT JG	1	

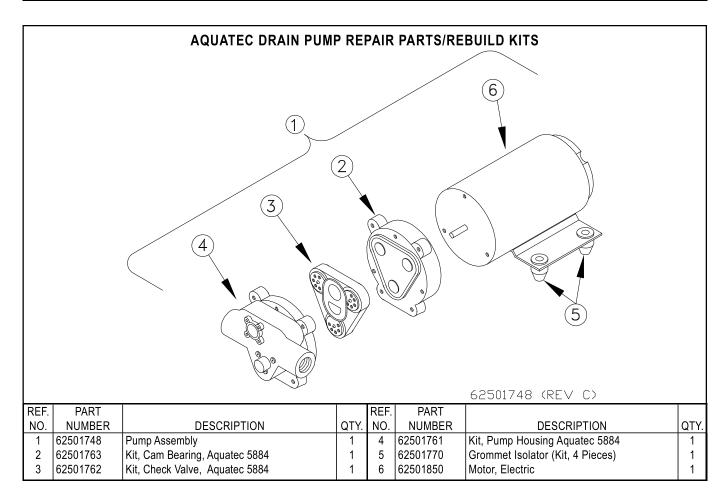

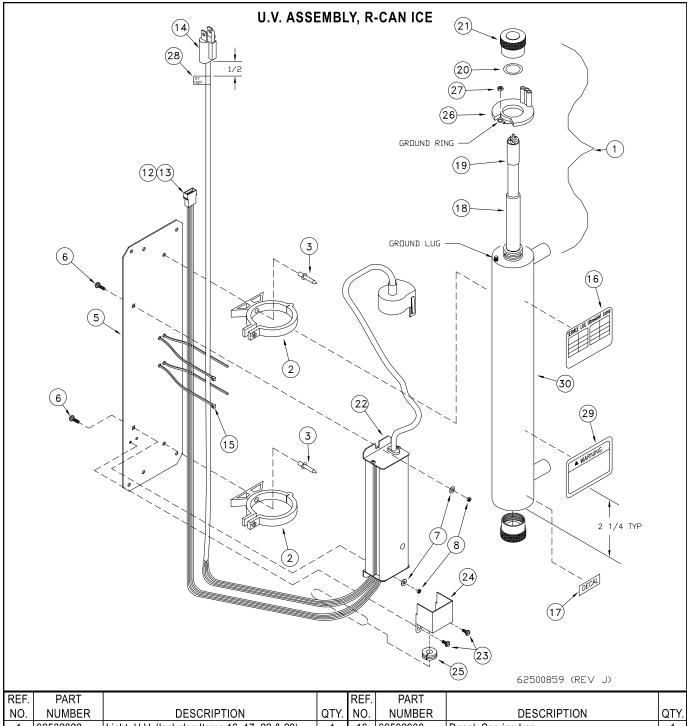

NO.	NUMBER	DESCRIPTION	QTY.	NO.	NUMBER	DESCRIPTION	QTY.
1	62502822	Light, U.V. (Includes Items 16, 17, 22 & 29)	1	16	62502938	Decal, Service Log	1
2	N/A	Clip Included W/Item 1	2	17	62500940	Decal, Bulb Replacement	1
3	954-002-003	Pop Rivet 3/16 x 3/8 Stain OEDH	2	18*	62500855	Sleeve, Quartz UV QS-463	1
4	N/A	N/A	N/A	19*	62500854	Light, UV S463RL R-Can	1
5	625-901-072	Bracket 5 GPM Trojan Mount	1	20	62500853	O-Ring, 5 GPM UV OR-212	2
6	950-003-071	Carriage Bolt #10-24 x 1/2 SS	2	21	62500857	Nut, UV AL Gland RN-001	2
7	952-004-062	Washer, 1/4 SS	2	22*	62500856	Ballast Electronic BA-ICE-VI	1
8	951-001-002	Hex Nut #10-24 SS	2	23	061034	Self Tap Screw, 6-32 x 3/16	2
9	625-004-026	Wire Blue	2	24	62501719	Elec Cover, UV Light	1
10	625-004-172	Wire Black	2	25	62501720	Grommet, Rubber 3/5 x 5/8	1
11	625-004-028	Wire Red	2	26		Included With Item 1	1
12	62500641	Pin, 24-18 Awg Mate-N-Lok	3	27		Included With Item 1	1
13	62500682	Housing, 3 Pin Mate-N-Lok	1	28	62502930	Label, U.V Cord	1
14	62500690	Plug, W/18-3 SJT 110 V 59" Cord	1	29	62502939	Decal, Warning (Included With Item 1)	1
15	625-001-469	Tywrap, 1/6-5/8 Dia. 5 L	2	30	62503053	Canister, (Includes Items 16 & 29)	1

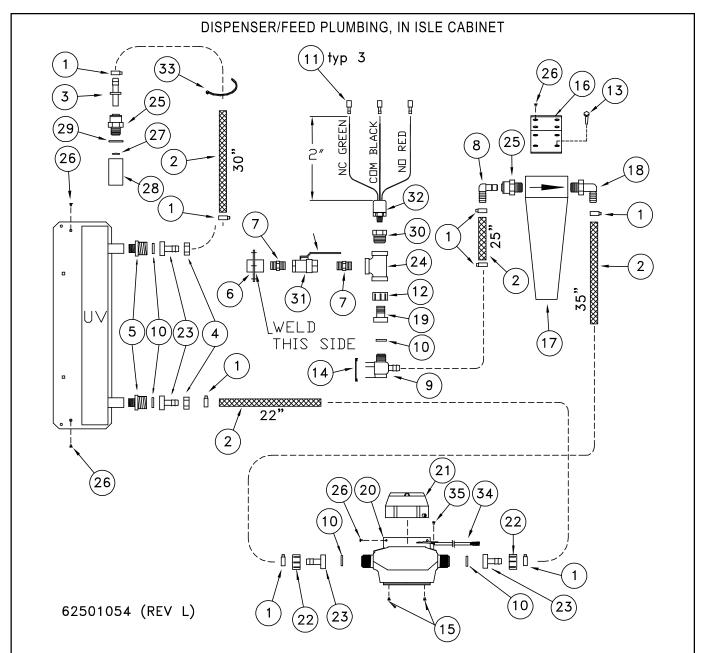

REF.	PART			REF.	PART		
NO.	NUMBER	DESCRIPTION	QTY.	NO.	NUMBER	DESCRIPTION	QTY.
110.							
1	625-002-881	Hose Clamp, .76 x .89	8	19	62501814	Fitting, Nylon 1/2m Swivel	1
2	625-001-929	1/2 Dia. PVC Braid Hose	9.3	20	62501055	Bracket, Water Meter	1
3	62500522	Fitting, 1/2 Stem x 1/2 Barb, JG	1	21	62500658	Flow Meter, Gallons	1
4	62500443	Fitting, Nylon Nut 3/4 GHT	2	21	62500790	Water Meter Metric (Optional)	1
5	62501793	Fitting, Nylon 3/8 M x 3/4 GHT	2	22	625-002-955	Fitting, Swivel Hex Nut Black 3/4 FPS	2
6	62502608	Fitting, 1/2 Bulkhead	1	23	62500423	Barb-Swivel, 1/2 H	4
7	62501169	Fitting, Nylon 1/2 Nipple	2	24	62502606	Fitting, 1/2 Tee SS	1
8	625-005-993	Fitting, 1/2 Stem x 1/2 Barb 90°	1	25	625-001-672	Fitting, 1/2m x 1/2 T, JG	2
9	62501392	Solenoid Valve, 5 GPM	1	26	950-005-006	Self Tapping #8-32 x 3/8 Hex Head	8
10	625-004-467	Washer, GHT White Rubber	5	27	62501815	Screen 1/2" Nozzle	1
11	62500691	Terminal, 1/4 M	3	28	62501818	Nozzle W/Screen 1/2"	1
12	62501459	Nut Assembly W/Clamp	1	29	39212011	Seal Ring 1/2"	1
13	950-005-020	Self Tapping 10-3/4 Hex	4	30	62502716	Fitting, SS, 1/2 x 1/4 RB	1
14	62500675	Surge Suppressor	1	31	62502596	Valve, Ball 1/2 Brass LF	1
15	950-005-027	Self Tapping Screw 8 x 3/8 Hex Head Type A	4	32	62502593	Press Sw SPDT	1
16	625-900-941	Bracket, Filter	1	33	625-001-469	Tywrap 1/16 Nylon	1
17	62501813	Filter Housing, 1/2"	1	34	62500661	Assembly, Water Meter Sensor	1
18	62500421	Fitting, Nylon 1/2 M x 1/2 Barb	1	35	392-010-019	Self Tapping Screw #6-20 x 3/8 Phillips Pan Head	2

